


Montageanleitung

P952-01; P952-02; P952-03
SchwaBi Verrutschsicherung

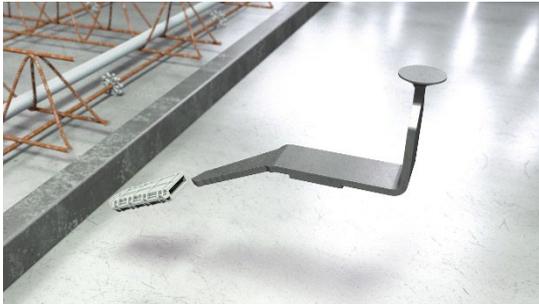

Kappe wird auf das Schwert gesteckt.



Verrutschsicherung wird auf dem Abschaler platziert.




Frischbeton wird eingebracht.



Magnet wird aufgesetzt und verriegelt.



Ausgehärtete Betonschale wird gedreht...

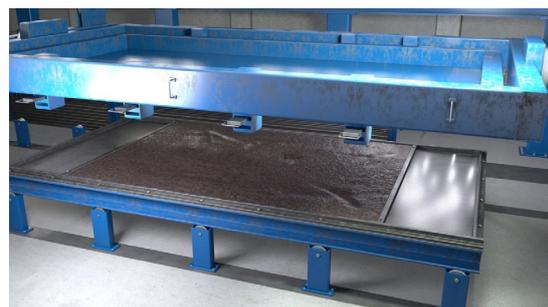

...und in die zweite Betonschale gesetzt.



Magnete fixieren die erste Betonschale auf dem zweiten Schaltisch.




Schaltisch wird entriegelt.



Verriegelung von Magneten wird gelöst.




Doppelwand wird angehoben, Magnet bleibt auf dem Schaltisch.

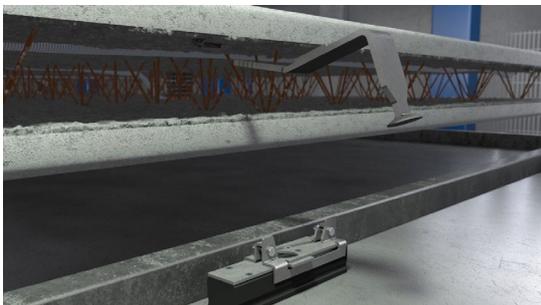

Schwert wird aus der einbetonierten Kappe herausgezogen.

Assembly instruction

P952-01; P952-02; P952-03
SchwaBi Slip protection

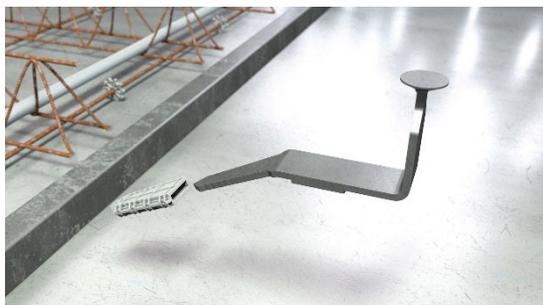

Cap is placed on the sword.




lip protection is placed on the shuttering.




Fresh concrete is poured.



The magnet is fitted and locked.

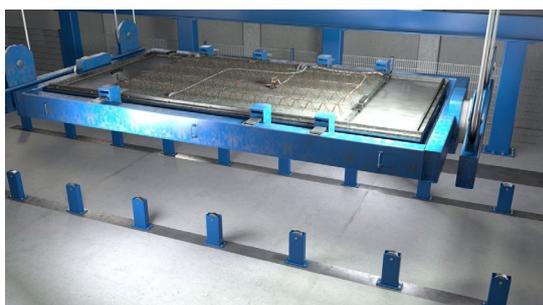


Hardened concrete shell is turned...

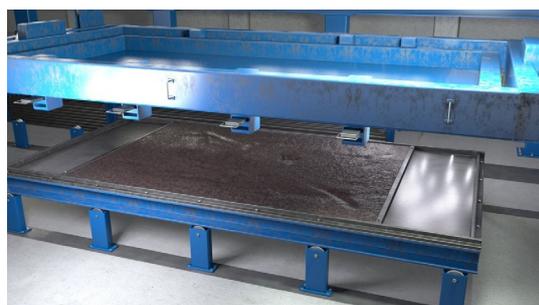

...and placed in the second concrete shell.



Magnets fix the first concrete shell to the second formwork table.

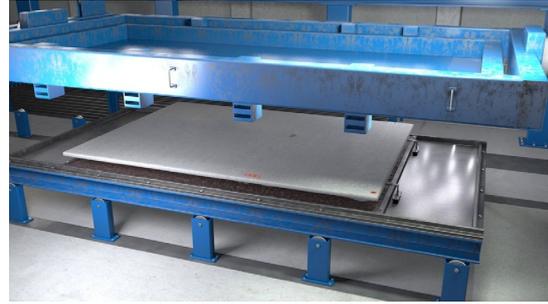


The switching table is unlocked.



Locking of magnets is released.



Double wall is lifted, magnet remains on the switching table.

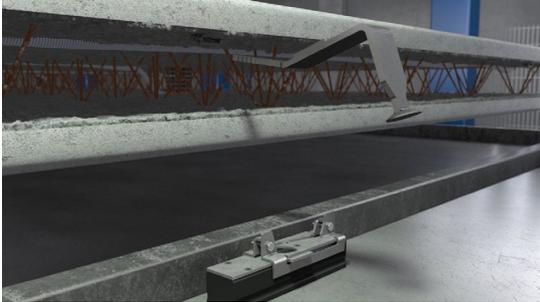

The sword is pulled out of the cap set in concrete.